Gateway Connectivity EVO 1.0

		-		1		A State of the second	1. 1. 1.
A CONTRACTOR OF	A CONTRACTOR		the second second second				the Barry
Section and the second						- 0 X	
1 million (1997)	The set in der and the set of the set of the set	A A A bout white to a but				and the second se	and the second
	NAME AND ADDRESS AND ADDRESS ADDRESS		0240			the second s	and all and a second
						The second second second second	and the second se
	II and		18 Streth Tex	Ar Guely	Medium speed exhaust	and the second second second	
50 6	M ID add profiles	Field history in Artolic	South Pages for Ear	Ar Gusto Base	High speed signly	and the second second	
and the second	Tuffager comm.	Fact testery statustes	Available 13 School Taxe	CO2 level	High quest exhaut	the second second	
A State of the second	CEM Code	Fault had any open status	Har Subsh Puete Par Day	Fred Harder	Frod potection per heater artport	and the second s	
and the second second	Where candidan	Comitor	U	Yestidon Care	Partadar subjects		
- el	Manufacture tide	Operation Status	Max Num Of Switch Pares	Ar Filter Tone Flamaring	Free ventilation heating setport		
	Silterare build date	544	Actual Vertilation apound	Ar filter Time Duration	Fine ventilation cooling offset		
	Marsha	Number Of Switch Pairie	Actual Ferinased Debusar	Ar Filter Parcentage		The second se	
	ALM D. MitcheshiD	India subdy part	Andlew	Educe NPH			
	W update consul	Day Of Week		water 70°31			
	FW variates status	Hear	Amazing Son 7	Mage 1			
	Pell spidate ETA	Mister					
	This special approved	Switch part sortial easts					
	Last Martin and a	Bathdh point, Public Port					
	N summer day line	Bedrift permit Auto-CD1					
	Beer see	South part Aug U.C.					
	Tell Sele	Install west Continues					
	10.0 10.0	Only program active					-
	Bundance	Clash program modulan		A			6800.00
	Summer DEM arrest	Activitie Clerk program					HF Etherne
	Test hotor roter	GP Schuckele Type					
10	Fait Nation Single	Seish Parts Po Day		dar good aquiy		No. of Concession, name	
	Time Every Like					and the second s	
	18 42 57 836 schumpton fla	D 87 READ HOLDING REGISTERS 46107 IN	I della (XXX2 A SXTAA			8	
	TANASA Conversion was by 102,000			the second s	and the second se	and the second s	
	P Terme and para to	nter 🔯 🚯 🚯	11 10 11 11 10 m		and the second se	Printing 2	
					440 8 4 8 8 8 m		
and the second se					24/14	10035 TT0	and the second
and the statement of the section of							
			and the second se	And the owner of the owner owner owner owner owner owner own			
	-				the second se		
Waran and					-		
	In the bar				\bigcirc		
	Card Card Card Card Card Card Card Card	n () ++ /=	- 10 HO HILL	THE OWNER AND ADDRESS OF TAXABLE PARTY.	0		
the art is how?	11 1" 1"	15 12 16		The Case of the Party		A MARCONAL	
10	1 1 2 @ 3	H A and a la		112 112 11			

Videó - Beüzemelési útmutató https://vimeo.com/573960104/213d46a3cf

Szoftver letöltés:

Töltse le az alábbi linkről a szükséges programokat, hogy elvégezhesse az eszköz konfigurálását:

https://www.siberzone.es/download/21146/



Az eszköz (ethernet gateway) szoftverének frissítése

Csatlakoztassa az eszközt egy micro-USB-USB kábelen keresztül a számítógéphez, melyen a programok vannak.



Az internet hálózati kábelt is csatlakoztassa az eszközhöz:



Miután az eszközt az USB segítségével csatlakoztattuk a számítógéphez és a hálózati kábel is csatlakozásra került, módosítsuk a "UpgradeBRDG" program kiterjesztését a ".dat" kiterjesztés ".exe"-re cserélésével.

P BRUGEURMOUDUSTERES TRIEVI		A CONTRACTOR OF	1 7 7 7 W W
UpgradeBRDG.exe	19/01/2021 16:48	Archivo DAJ	4.00C.P
	Cambia	ar nombre	
	and the second second		
			and the second and the second and the second s
		Al cambiar la extensión d	le nombre de archivo, el archivo puede quedar inutilizadie.
		Al cambiar la extensión d	te nombre de archivo, el archivo puede quedar mutanzaole.
		Al cambiar la extensión d	e nombre de archivo, el archivo puede quedar inutilicade. a cambiarla?
	A	Al cambiar la extensión d ¿Está seguro de que dese	e nombre de archivo, el archivo puede quedar inutricade. a cambiarla?
	A	Al cambiar la extensión d ¿Está seguro de que dese	e nombre de archivo, el archivo puede quedar inutricade. a cambiarla?

A szoftver ezután elindul, hogy frissítse az eszközt a rendelkezésre álló legújabb verzióra. Kövesse az utasításokat a frissítéshez nyomja meg az "y" és az "enter" billentyűt.



Amint megjelenik az "Current software version" /aktuális szoftver verzió/ frissítése, nyomja meg az enter gombot, és a program bezárul.



Az eszköz internethálózatra történő csatlakozása



Az eszközt ethernet kábelen keresztül csatlakoztassuk a rooterhez.

A micro-USB-tápkábelt is csatlakoztassuk az eszközhöz a router közelében.



Amikor újra csatlakoztatjuk az eszközt, van egy körülbelül 10 perces időablakunk, amelyben a "BRDGEthModBusTester" szoftveren keresztül hozzáférhetünk.

Amikor elindítjuk a "BRDGEthModBusTester" programot, egy Windows biztonsági figyelmeztetést kapunk, nagyon fontos, hogy "engedélyezzük a hozzáférést", hogy később hozzáférhessünk az eszközhöz.



A hozzáférés engedélyezése után az eszközök listájában megjelenik egy IP-cím, amelyet ki kell választanunk és majd a bal oldali ikonra kell kattintanunk, hogy csatlakozhassunk az eszközhöz.

Listen Q	C Recreate nod	e tabs
WebSocket	Settings	
COM4	Modbus address	0
Read Function Function Code ReadHoldingRegiste - Read	Setting Tag	0
Register Address 40000 1 Quarter 1 0	Setting Index:	0
Interval 1000 🗧 ms 🗌 Enable Polled Read	Value	
Wite Function Function Code WriteRepater - Write	Lower bound	
Address (40000 13 Value 10 5	Upperbound	

Eszköz konfiguráció

luct Type supported by p	The second	45 02C05 (4) VMS 02HB	eate node tabs N R RV	2 1 0								
ince type subponed by th	a had		and presses where he									
RF serial	0x0078005E	Messages send current hour	16	Address 13.	0	Reset device	56785 15	Current	Gateway 192.16	8.1.1		
MF ID, subID, prod type	0x0001C848	Messages send last hour	0	Address 14:	0	Power on Time	244	Curr	ent DNS1 80.58	61.254		
Software version	0xFF2B	RF load current hour[%]	0.08291111	Address 15	0	Daylight saving type	0	Curr	ent DNS2 80.58	51.250		
OEM Code	106	RF load last hour [%]	0	Address 16:	0	timezone offset	0	Binding				
Rf trancv. capabilities	QxFEFE	Product type	0x00000000	Address 17:	0	UTC Time	17-09-20 10:58:57	Initiate binding ty	ype: 0 - Incom	ing single product	8-	
Manufacturer date	NOT AVAILABLE	Bind command		Address 18.	0	Local Time	17-09-20 10:58:57	Slave UID to bir	nd to: 0 G:	1		
Software build date	14-5-2020	Create Node		Address 19:	0	IP adress assignment	0		0	O Bind	Remove	16
Identifier	BRDG-02EM23	First address to assign	1	Address 20	0	IP address	192.168.0.207	Product Type		9 0110	Tremore	-
ustomer specific Product ID	0xC848	Remove node		Address 21:	0	Netmask address	255.255.255.0	Manufact group	1 0 M	anufacturer; 20	set Set	5
stomer specific Node Id		Actual binding status	0	Address 22:	0	Gateway address	192 168 0 1	Hw type	0 0 R	Whex: 0001	C8004 Get	
RF comm status	0	No of nodes	4	Address 23:	0	DNS1 address	192.168.0.1		and a			
Battery status	0	7Address 1	3	Address 24	0	DN52 address	0.0.00					
Fault status	0	Address 2	4	Address 25.	0	Activate new ip settings		Push buton bind	ing	Serial Number		
RF statistics index		Address 3	5	Address 26	0	MAC address	58 F3 87 78 0D 5E	Disabled	Set Get	ABCDE	Set	
RF stats amount		Address 4	2	Address 27:	0	Device Passw		O triable incom	ning binding		Get	
RF stats device ID		Address 5:	0	Address 28.	0	Server domain name	wss://gw.siberclouc	O milate colgo	ing beiding			
RF stats average		Address 6	0	Address 29:	0	UID	00 09 CF FF 0F 36 5	Actual Binding st N/A (default)	alus.		Get	
RF stats stdev		Address 7:	0	Address 30:	0	RF protocol	0					
RF stats min		Address 8	0	Address 31:	0	Firmiware URL		Server connectio	n setup	0		
RF stats max		Address 9	0	Address 32:	0	FW update status	0x0000	Password		v		- 11
stats percentage missed		Address 10	0	OEM code	106	Link status	3	Server URL		1		
RF stats received count		Address 11	0	Modbus events	3 13	Current IP Address	192 168 1 193	GUID				2
RF stats time since last		Address 12	0	Update firmware		Current IP Mask	255.255.255.0				Wite	-
RF stats min RF stats max atats percentage missed RF stats received count RF stats time since last		Address 9 Address 9 Address 10 Address 12	0 0 0 0 0	Address 31: Address 32: OEN code Modbus events Update femware	0 0 106 3 13	Firmware URL FW update status Link status Current IP Address Current IP Mask	0x0000 3 192.168.1.193 255.255.255.0	Server connectio	in setup 1	0	Wite	11 2

A hozzáférés engedélyezése után

• A refresh current page 3 gomb megnyomásával frissítse az összes átjáró rekordot.

EVO párosítás:

- o Adja meg a 0001C892 kódot (EVO VMD-02RPS78 modell) a RAW hex cellába 4
- o Nyomja meg a Set gombot 5
- o Válassza ki a "Outgoing product type" opciót a 8-as mezőben.
- o Adja hozzá a 6-os cellába az első szabad számot, amely nagyobb, mint 1 a címlistában 7
- o Állítsa alaphelyzetbe (reset) vissza az EVO-t
- o 5 percen belül nyomja meg a Bind gombot 9
- o Hagyjon eltelni néhány másodpercet
- o Frissítse az összes hídregisztert a 3. gomb megnyomásával.
- o Most már látnunk kell az eszközt a 7-es címlistában

Amennyiben a készülékhez érzékelő eszközt is szeretne párosítani, abban az esetben ismételje meg a folyamatot minden egyes rendelkezésre álló szenzorral. Fontos, hogy a szenzorok már kapcsolódjanak az EVO-hoz, mielőtt párosítanánk őket az "Ethernet Bridge" eszközzel:

o Írja be a 0001C845 kódot (CO2-érzékelő) vagy a 0001C846 kódot (páratartalom-érzékelő) a 4. cellába.

- o Nyomja meg az 5. gombot
- o Válassza ki a "Bejövő egyedi termék" lehetőséget a 8-as mezőben.
- o Írja be a 6-os cellába a 7-es listában az első 1-nél nagyobb szabad számot.
- o Nyomja meg a 9. gombot
- o Gyorsan állítsa a szondát párosítási üzemmódba (*)
- o Hagyjon eltelnie néhány másodpercnek
- o Frissítse az összes hídregisztert a 3. gomb megnyomásával.
- o Most már látnunk kell a készüléket a 7-es listában

Állítsuk be a Gateway címet:

o Írjuk be a hídmatrica kódját (szóközök nélkül, nagybetűket tiszteletben tartva) a

szövegmezőbe 10



o Írjuk be a szövegdobozba a wss://gw.sibercloud.com/ címet 11

o Nyomja meg a gombot **12**

- Aktiválja az események küldését a hídról:
- o Írja be a 3. számot a szövegmezőbe 13
- o Nyomja meg az Enter gombot

• Használja a híd sorozatszámát a 14. táblázatban, és y alakítsa át tizedes bázisra. Ez a szám lesz a híd átjáró kódja a mi APP-unk számára. (https://codebeautify.org/hex-decimal-converter)

Állítsa vissza a hidat:

o Írja be az 12345-öt a 15-ös szövegmezőbe

o Nyomja meg az Entert

• Zárja be a tesztelőt

Importőr:

MULTIKOMPLEX BUDAPEST KFT.

A páraelszívók szakértője... 1995 óta

H-1211 Budapest Mansfeld Péter utca 27.

tel.: (36-1) 427 0325

www.multikomplex.hu